

## Flushing debris from the unloader / Priming an Air locked unit

1. Hook up the garden hose and pressure hose then turn on the water.
2. Remove the pressure nozzle and let water flow out the end of the wand, try to get all the air out.
3. Turn the unloader handle to the lowest pressure setting.
4. Start the unit and work (squeeze & let go) the trigger gun a few times.
5. Turn the unloader handle down (more pressure) 1 full turn and repeat step 4.
6. Repeat step 5 two or three more times.
7. Put the pressure nozzle back in and adjust the unloader for the rated pressure of the unit.

If this dose not fix your low / no pressure problem please contact your Water Cannon Representative.